



## Digital Hearing Instrument



### Adjusting the Volume

---

Your Octane Hearing Aid is equipped with a rocker style volume control. To increase the volume level, push the top of the rocker, and to decrease the volume, push the bottom of the rocker.

As you adjust the volume, there may be a whistling noise, which is called feedback (don't be concerned). This is caused by amplified sound bouncing off your hand back into the instrument. The whistle should end when you take your hand away.



## Digital Hearing Instrument



### Adjusting the Volume

---

Your Octane Hearing Aid is equipped with a rocker style volume control. To increase the volume level, push the top of the rocker, and to decrease the volume, push the bottom of the rocker.

As you adjust the volume, there may be a whistling noise, which is called feedback (don't be concerned). This is caused by amplified sound bouncing off your hand back into the instrument. The whistle should end when you take your hand away.